


# Instructions for measuring MAGIGLIDE Bifolding Closet Doors

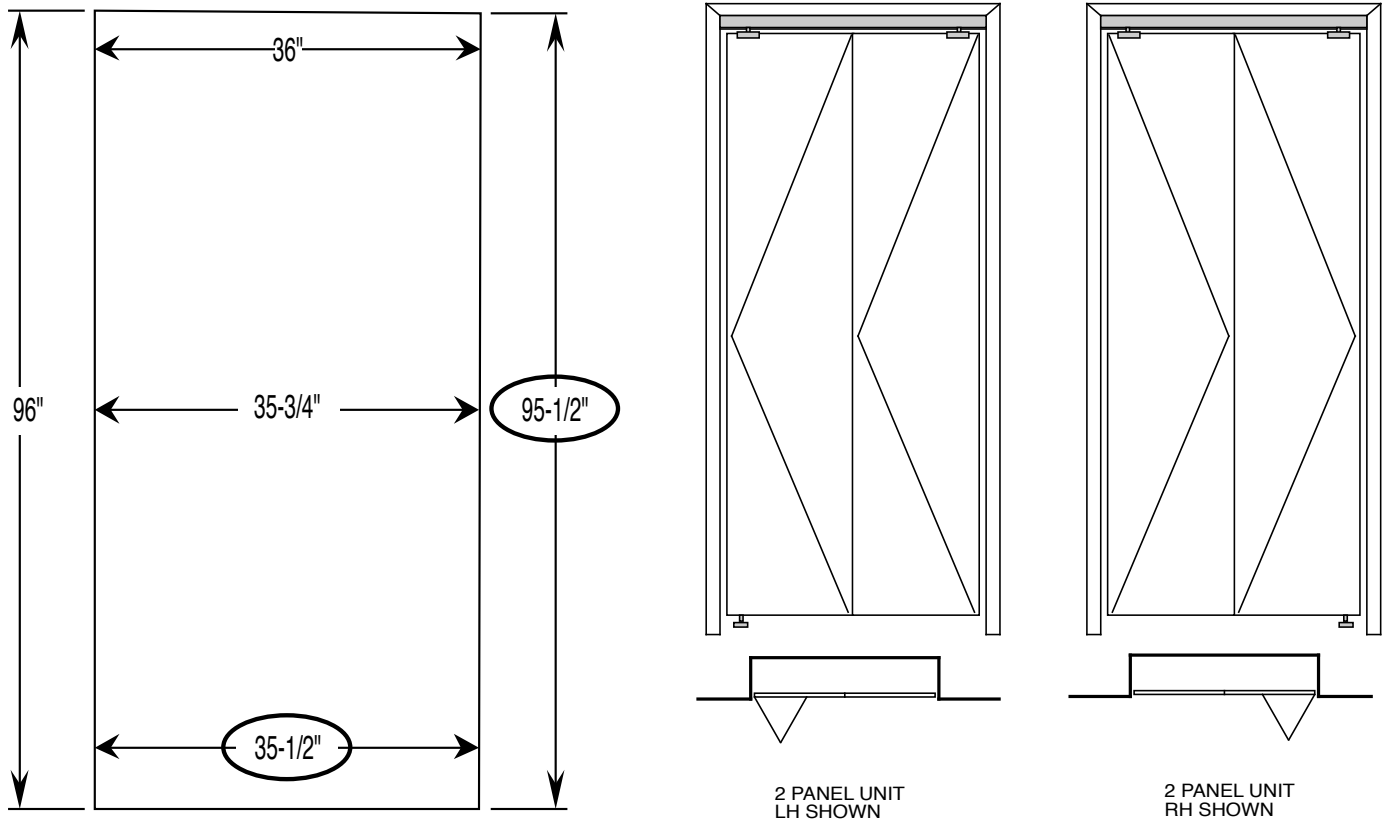




To place an order for Magiglide bifolding Closet Doors, we require you to provide us with the finished opening dimensions and the handing (LH or RH) of the closet. A finished opening is an opening that is complete and ready for the installation of the bifold door. All measurements are to be taken from the surface that the track is fastened to, down to the floor that the floor plate is mounted upon. We will make all necessary deductions for the clearances of the door (i.e. carpet). The following is an explanation of how to determine the finished opening dimensions.

**Width:** Measure the opening in three locations (i.e.. Top, Middle & Bottom). If the two smallest dimensions are within 1/8" of each other then the larger of the two should be used as the finished opening width. If they are not within 1/8" of each other then the smallest of the two dimensions should be used as the finished opening width.

**Height:** Measure the height at the sides of the opening and the center; the **smallest** of these dimensions should be used as the finished opening height.



FINISHED OPENING WIDTH TO BE USED FOR THIS CLOSET IS 35-1/2" X 95-1/2".

THICKNESS	HEIGHT	NUMBER OF PANELS IN AN OPENING				
		1 panel 	2 panel 	4 panel 	6 panel 	8 panel 
3/4"	24" to 96"	10" to 36"	18" to 48"	36" to 96"	54" to 144"	72" to 192"
3/4"	96" to 108"	10" to 30"	18" to 48"	36" to 96"	54" to 144"	72" to 192"
1-1/8"	24" to 108"	10" to 36"	18" to 48"	36" to 96"	54" to 144"	72" to 192"
1-1/8"	108" to 120"	10" to 30"	18" to 36"	36" to 72"	54" to 108"	72" to 144"